

RTLVD-HVDPCI

CONFIGURATION SHEET

SWITCH & JUMPERS			
LOCATION	JUMPER DESCRIPTION	FUNCTION	FACTORY SETTING
JP1	HVD Terminator Power	ON = Term Power Exported	OFF
JP2	LVD Terminator Enable	ON = Enabled	ON
JP4	LVD Terminator Power	ON = Term Power Exported	OFF
S1	HVD Terminator Enable	ON = Enabled	ON

LED & CONNECTORS	
J1	HVD
J2	Compact PCI
J3	DC Power (For Test) Pin 1 = +5 v Pin 2, 3 = GND Pin 4 = +12 v
J4	LVD/SE
J8	Remote SCSI Activity Indicator
D2	SCSI Activity LED